

LiFePo4 Setup Instructions

1. The instruction for 12.8V 100AH LiFePo4 battery as sample:

- 1.1 Discharge current do not more than 100A
- 1.2 Charge current do not more than 50A
- 1.3 Bulk charging voltage: 14.6VDC
- 1.4 Low DC cut-off voltage: 12VDC
- 1.5 Low DC alarm voltage: 11.2V

2. The instruction for 25.6V 100AH LiFePo4 battery as sample:

- 1.1 Discharge current do not more than 100A
- 1.2 Charge current do not more than 50A
- 1.3 Bulk charging voltage: 29.2VDC
- 1.4 Low DC cut-off voltage: 24VDC
- 1.5 Low DC alarm voltage: 22.4V

The instruction for 51.2V 100AH LiFePo4 battery as sample:

- 1.1 Discharge current do not more than 100A
- 1.2 Charge current do not more than 50A
- 1.3 Bulk charging voltage: 58.4VDC
- 1.4 Low DC cut-off voltage: 48VDC
- 1.5 Low DC alarm voltage: 44.8V